

BC 22 T (EURO 1) Brushcutter

Documents

Engine

Starter assy and fuel tank

Air filter

Transmission

Accessories

Carburetor

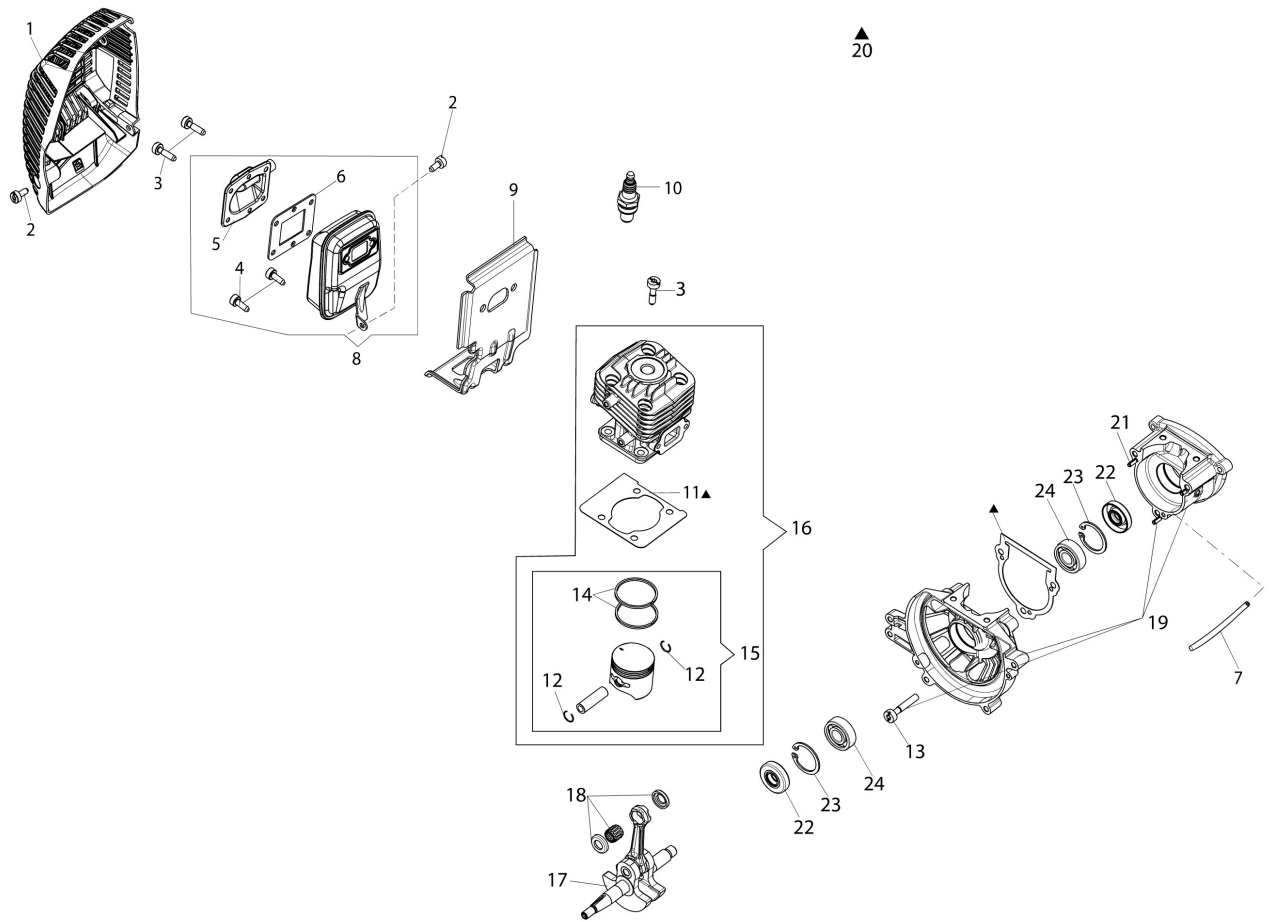


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61370302R	Guard			Grigio; Grey	
2	3	3891037R	Screw				
3	6	3891047R	Screw				
4	6	3891009R	Screw				
5	1	58070143R	Muffler cover				
6	1	58070144R	Gasket				
7	1	094600126	Tube				
8	1	61370215AR	Muffler				
9	1	61370143R	Deflector				
10	1	3055112	Spark plug				
11	1	58070011R	Gasket				
12	2	58070166R	Ring				
13	3	3891051R	Screw				
14	2	3123002AR	Piston ring	SN 9186200001			BT3-132-05/16
15	1	61370252A	Piston assy Ø32	SN 9186200001			BT3-132-05/16
16	1	61370253B	Complete cylinder Ø32	SN 9186200001			BT3-132-05/16
17	1	58070045R	Complete shaft				
18	1	61370254	Set roller cage and washer				
19	1	61370085R	Crankcase assy				
20	1	61370255	Gasket set				
21	5	61280044R	Locking sleeve				
22	2	3050042R	Seal ring				
23	2	3025018R	Ring				
24	2	3034007R	Bearing				

Illustration Starter Assy and fuel tank

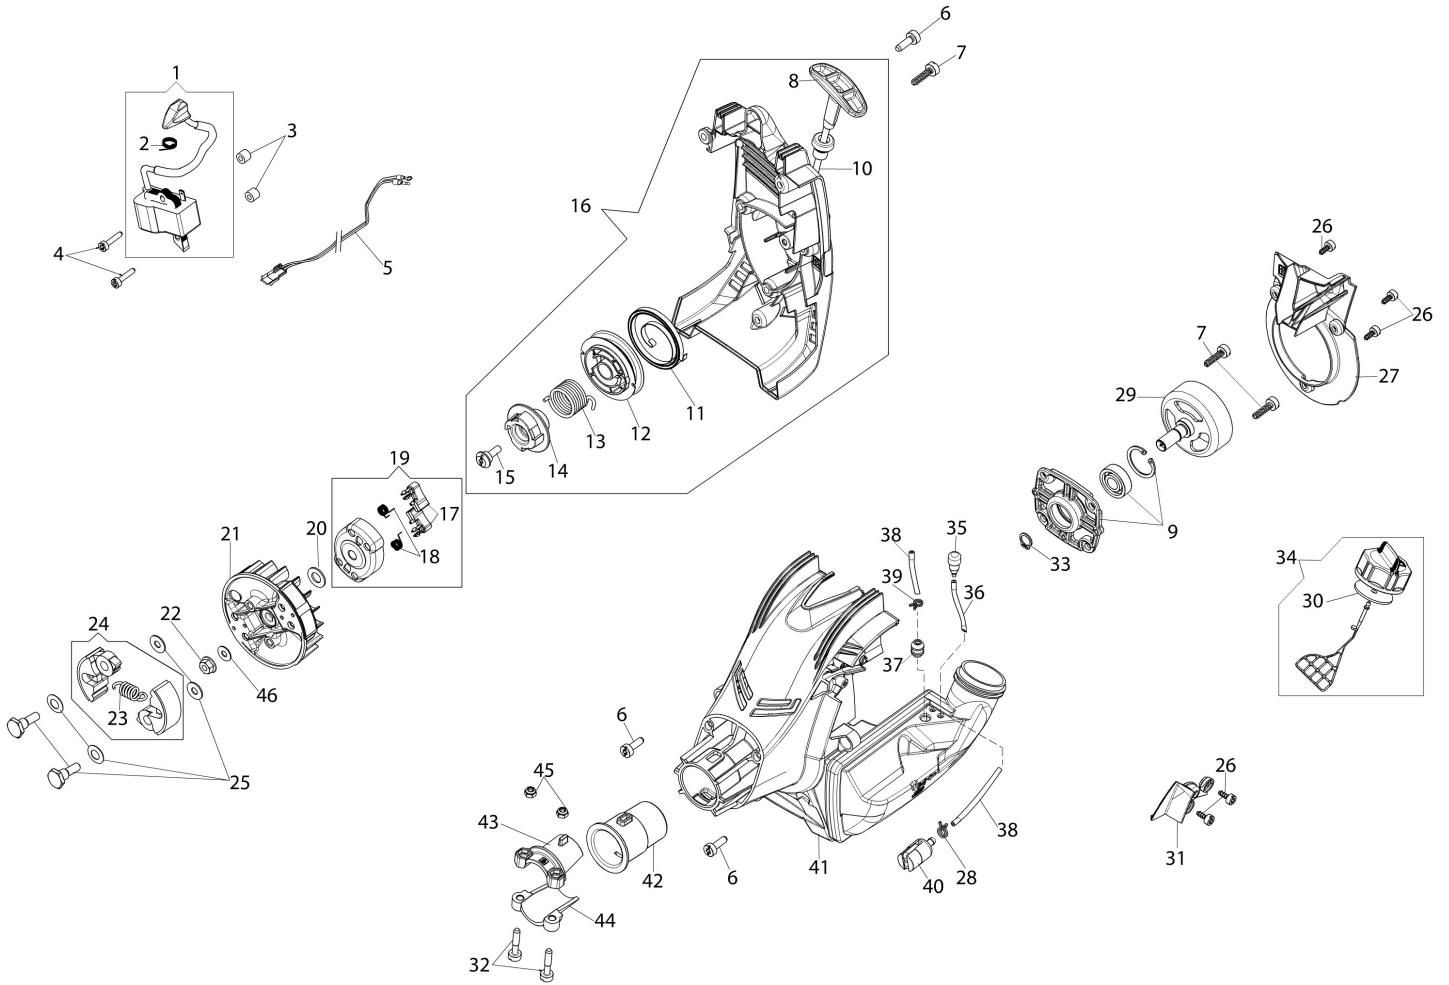


Illustration Starter assy and fuel tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2501002R	Ignition coil				
2	1	50050127	Spring				
3	2	50160218AR	Spacer				
4	2	3891020R	Screw				
5	1	61370059R	Cable				
6	7	3891038R	Screw				
7	7	3893060R	Screw				
8	1	61370082R	Handle				
9	1	61370256	Flange kit				
10	1	61370024R	Rope				
11	1	61070036R	Spring				
12	1	61370022AR	Starter pulley				
13	1	61370237R	Spring				
14	1	61370023R	Sprocket				
15	1	50160024	Screw				
16	1	61370232R	Starter assy			Arancio; Orange	
17	2	61370014R	Pawl				
18	2	61070039R	Spring				
19	1	61370013R	Clutch driver				
20	1	3064034	Washer				
21	1	58070133R	Flywheel				
22	1	3912014R	Nut				
23	1	61070090R	Spring				
24	1	61070091AR	Clutch				
25	1	61370257	Kit pin + Belleville washer + spacer ring				
26	5	3893009R	Screw				
27	1	61370031R	Flange				
28	1	4098377R	Band				
29	1	61370083R	Clutch drum				
30	1	61070006R	Gasket				
31	1	61370251R	Cover			Arancio; Orange	
32	2	3891050R	Screw				
33	1	3024010R	Snap ring				
34	1	61372003R	Tank cap				
35	1	61070011AR	Breather valve				
36	1	3073001R	Breather fuel pipe				
37	1	4161211R	Bush				
38	1	61370038R	Tube				
39	1	3059026	Band				
40	1	094600450R	Fuel filter				
41	1	61370185R	Cover with fuel tank			Arancio; Orange	
42	1	61370030R	Sleeve				
43	1	61370029AR	Adaptor				
44	1	61370028AR	Adaptor				
45	2	3914003R	Nut				

Illustration Starter assy and fuel tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
46	1	3819031R	Washer				

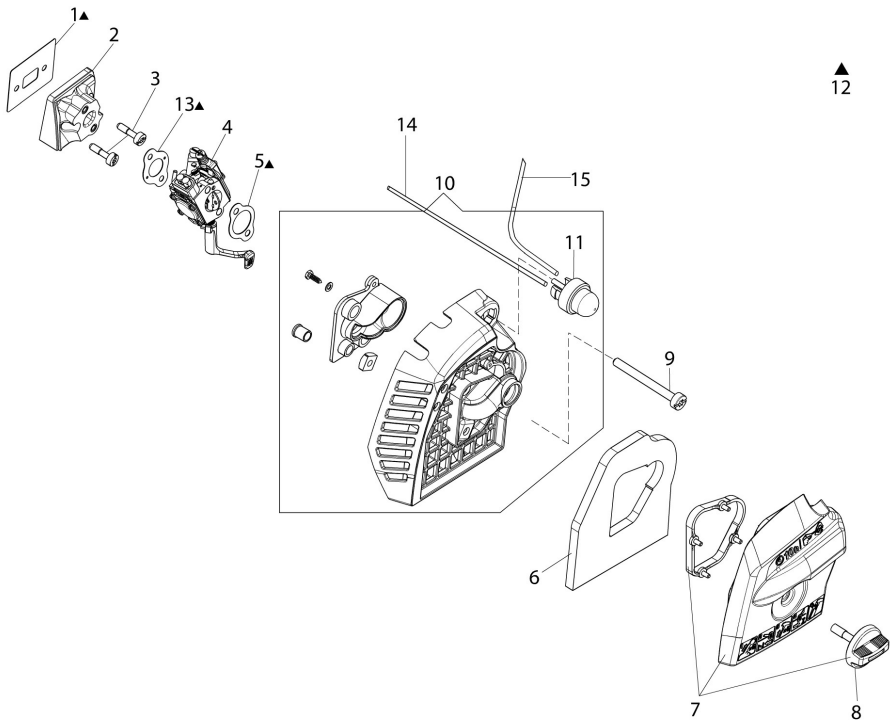


Illustration Air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	58070025AR	Gasket				
2	1	61370001R	Insulator				
3	2	3891046R	Screw				
4	1	2318265R	Carburetor				
5	1	56570058R	Gasket				
6	1	61370160R	Air filter				
7	1	61370258	Filter cover kit			Grigio; Grey	
8	1	61370008R	Knob				
9	1	3891063R	Screw				
10	1	61372008R	Filter support			Grigio; Grey	
11	1	2318817R	Air purge				
12	1	61370255	Gasket set				
13	1	61200196AR	Gasket				
14	1	61370553R	Tube				
15	1	61240041R	Tube				

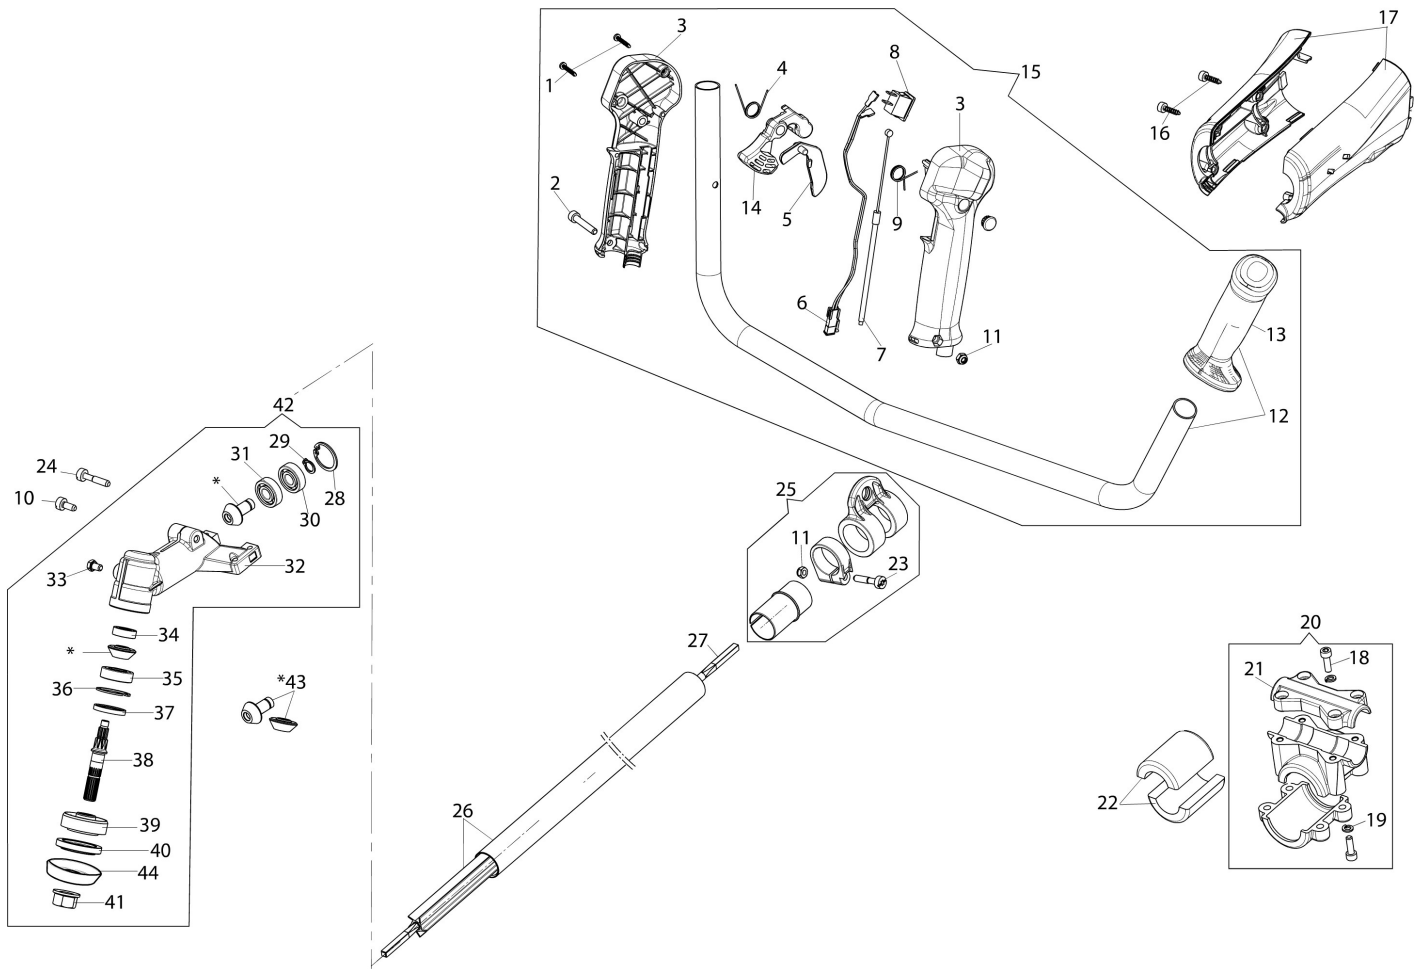


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3960068	Screw				
2	1	3801016R	Screw				
3	1	61040131R	Handle			Grigio; Grey	
4	1	4138361R	Spring				
5	1	4174246AR	Lever				
6	1	61370132R	Cable				
7	1	61370131R	Throttle cable				
8	1	2317032R	Switch				
9	1	4138360R	Spring				
10	1	3891037R	Screw				
11	2	3914003R	Nut				
12	1	4175126R	Handle and knob				
13	1	61040140R	Knob				
14	1	4174245CR	Throttle lever				
15	1	61370266	Complete handle			Grigio; Grey	
16	4	3893060R	Screw				
17	1	61370268	Compl. cover			Grigio; Grey	
18	8	3801011R	Screw				
19	8	3819006R	Washer				
20	1	074000183AR	Clamp				
21	1	072700264CR	Clamp				
22	2	61170072R	AV-mount				
23	1	3891050R	Screw				
24	1	3891050R	Screw				
25	1	61370134R	Band				
26	1	61370045R	Tube Ø24				
27	1	61370048R	Drive shaft				
28	1	3025026	Ring				
29	1	3024009R	Ring				
30	1	3035044	Bearing				
31	1	3035043	Bearing				
32	1	61170119AR	Gear case				
33	1	3906030	Screw				
34	1	3035045R	Bearing				
35	1	3034008R	Bearing				
36	1	3025018R	Ring				
37	1	61170134	Seal ring				
38	1	61170122	Shaft				
39	1	61170123	Hub				
40	1	61170124	Lower flange				
41	1	3933105	Nut				
42	1	61370558	Bevel gear				
43	1	61370262	Bevel gear set				
44	1	61110074R	Guard				






 

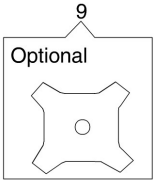


Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63109002	Head Load&Go				
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63100018R	Kit spring				
5	1	63100020R	Nylon spool				
6	1	63100007R	Knob				
7	2	63120001R	Bushing				
8	1	63100005R	Cover				
9	1	4095681R	4-tooth blade			Optional	
10	1	61370263	Guard kit			Arancio; Orange	
11	1	3893016R	Screw				
12	1	61370161AR	Blade				
13	2	3891038R	Screw				
14	2	094600054	Washer				
15	1	4179164R	Harness				
16	1	61370214R	Tool kit				
17	1	61370265	Labels kit				
18	1	61372033R	Skirt w/blade				

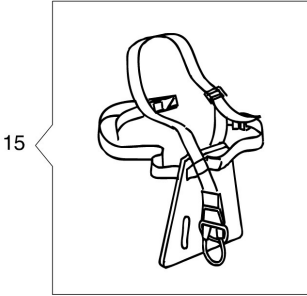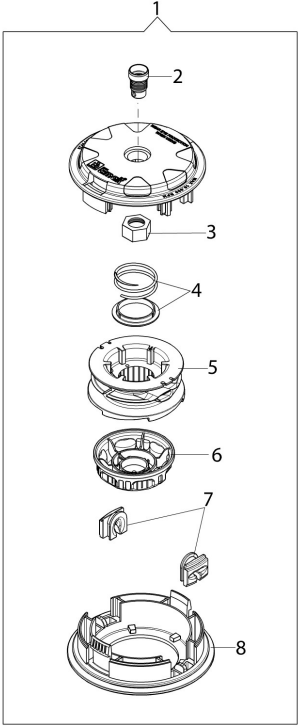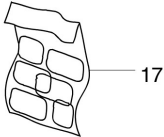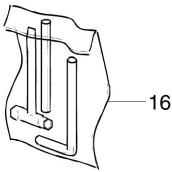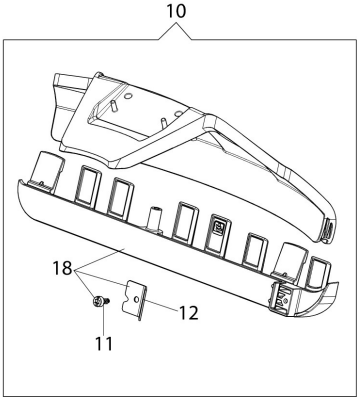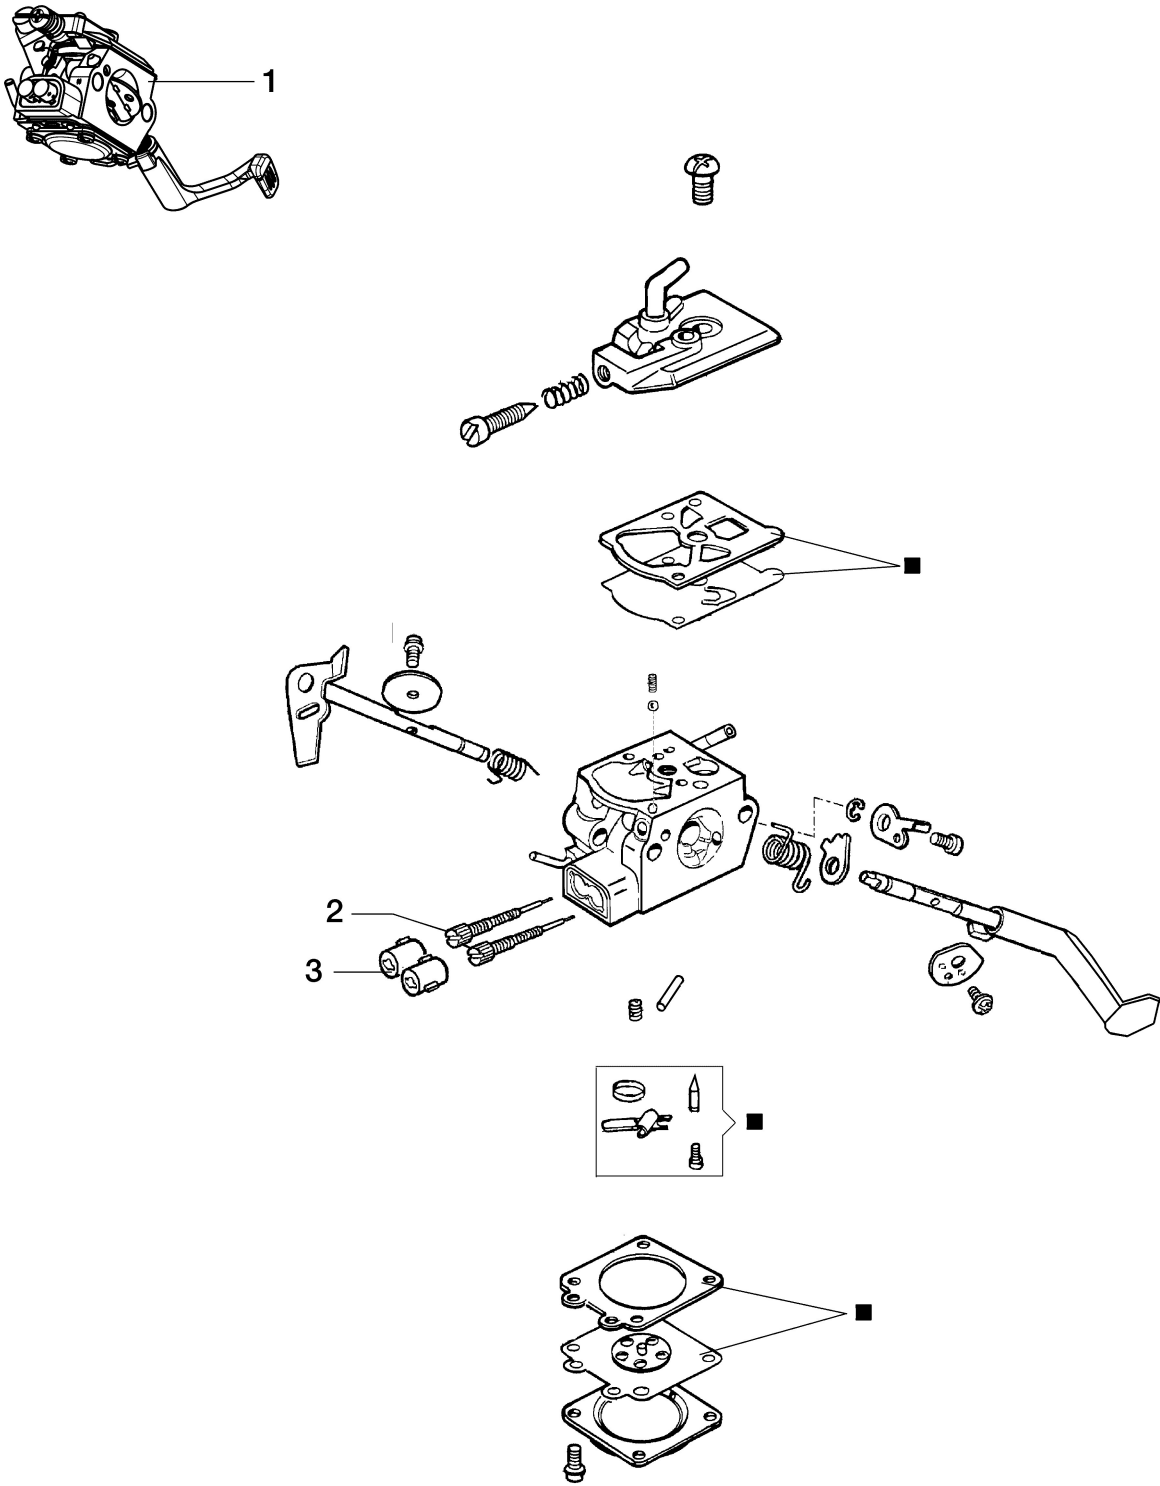

■ 4 — KIT RIPARAZIONE
REPAIR KIT

Illustration Carburetor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318265R	Carburetor				
2	2	2318837	Adjust. screw				
3	2	2318867R	Caps-lock				
4	1	2318671	Repair kit				