


## Handle Tightener Adjustment Instruction

There is an inner hexagon spanner in the instruction plastic bag. When the handle is too loose, open the rear cover with a screwdriver, and clockwise adjust hex-screws on the copper base. When the handle is too tight, counter-clockwise adjust the hex-screws. Please adjust the screws to appropriate tightness. If there is noise when you lift or lower the handle, infuse some lubricate oil in middle hole of copper base. At last please close the rear cover.



Open the rear cover with a screwdriver

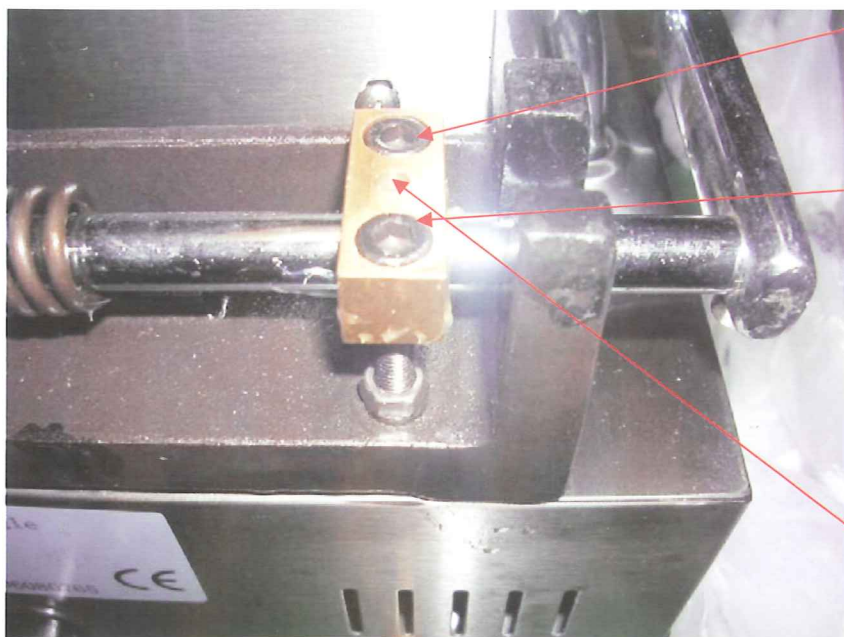

**Copper Base**

Clockwise adjust hex-screws on the copper base. When the handle is too tight, counter-clockwise adjust the hex-screws. Please adjust the screws to appropriate tightness

Infuse some lubricate oil in middle hole of copper base.